


## Resetting the EnGenius 3220 with Reset

1. Locate the reset pads on the main PCB of the 3220. Take the lid off and look in the corner near the serial port:

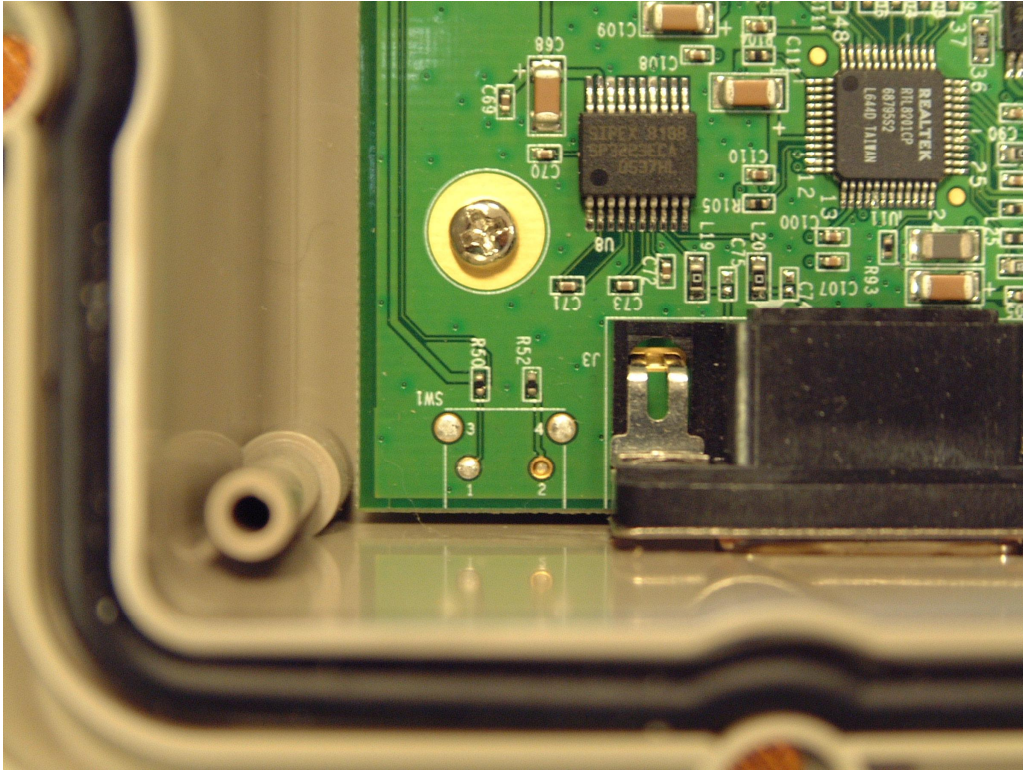

The pads numbered 1 and 2 are for reset. These need to be shorted to cause a reset. I use a pair of tweezers to do this or a bent paper clip – whatever.

2. With the device powered up normally, short the reset pads and wait for at least 10 seconds before releasing the reset button.