

Instructions on Factory Defaulting Homeplugs

Factory defaulting a Homeplug will, in most cases, resolve a problem that may occur when a Homeplug is not recognised when added to an existing network. This process will not affect the operation of the Homeplug, but please note that any Wi-Fi enabled devices, will have their SSIDs, Wireless Security and IP address changed back to the manufacturer default.

Below is a list of the current and discontinued Homeplugs and the method required to factory default them.

1200AV2 Homeplugs

Homeplug Model	Instruction to Factory Default	Default IP Address	Default Username / Password
PL-1200AV2-PEW HL192EW	Insert a paperclip into the Reset Hole and hold in for 4 seconds.	10.0.10.254	admin / admin
PL-HL129EP	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		
NET-PL1200AV2-PIGGY	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		
PL-1200AV2-POE	Press down and hold the Pair Button for 10 seconds.		

600AV Homeplugs

Homeplug Model	Instruction to Factory Default	Default IP Address	Default Username / Password
PL-600AV-SMT-PIGGY	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		

500AV Homeplugs

Homeplug Model	Instruction to Factory Default	Default IP Address	Default Username / Password
PL-500AV-POE	Press and hold down the Pair Button for 10 seconds.		
NET-PL-500AV-SMT	Insert a paperclip into the Reset Hole and hold in for 2 seconds.		
NET-PLV-500AV-PE	Insert a paperclip into the Reset Hole and hold in for 10 to 15 seconds.		
NET-PLV-500AV-PIGGY	Press and hold down the Black Base Button for 13 seconds.		
PL-HL117EP	Press and hold down the Black Base Button for 6 seconds.		
NET-PL-500AV-PIGGY	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		
PL-HL115EP	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		
NET-PL-HL125G	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		
NET-PL-500AV-4PE	Insert a paperclip into the Reset Hole and hold for 1 second.		
PL-500AV-PEVW	Insert a paperclip into the Reset Hole and hold for 1 to 3 seconds.	192.168.2.253	root / root

PL-500AV-PEV	Insert a paperclip into the Reset Hole and hold in for 1 second.		
NET-PLV-500AV-PE_MK2	Press and hold down the Reset Button for 10 to 13 seconds.		
PL-HL117E	Press and hold down the Reset Button for 10 to 13 seconds.		
HL117EW (2.4G/5G)	Press and hold down the WPS button for 5 seconds.	10.0.10.254	admin / admin
NET-PLV-500AV-PEWN	Press and hold down the WPS button for 5 seconds.	10.0.10.254	admin / admin
NET-PL-500AV	Insert a paperclip in the Reset Hole and hold in for 10 to 15 seconds.		

200AV Homeplugs

Homeplug Model	Instruction to Factory Default	Default IP Address	Default Username / Password
NET-PLV-200AV-PE	Insert a paperclip in the Reset Hole and hold in for 2 seconds.		
NET-PLV-200AV-PE_MK2	Press and hold down the Base Button for 6 seconds.		
NET-PL-200AV-MINI	Insert a paperclip in the Reset Hole and hold in for 2 seconds.		
NET-PL-200-AV-PUSH	Insert a paperclip into the Reset Hole and hold in for 2 seconds.		
NET-PL-200AV-PIGGY	Insert a paperclip into the Reset Hole and hold in for 2 seconds.		
NET-PL-200-AV-PIGGY_MK2	Insert a paperclip into the Reset Hole and hold in for 2 seconds.		
NET-PL-200-AV-PIGGY_MK3	Insert a paperclip into the Reset Hole and hold in for 2 seconds.		
NET-PLV-200AV-PIGGY	Press and hold down the Black Base Button for 6 to 13 seconds.		
NET-PLA-200-AV-3E-PIGGY6	Press and release button.		
NET-PL-200AV-PEV (NANO)	Insert a paperclip into the Reset Hole and hold in for 10 to 15 seconds.		
NET-PLV-HL113EW	Press and hold down the WPS Button for 5 seconds.	10.0.10.254	admin / admin
NET-PLV-200AV-PEWN	Insert a paperclip into the Reset Hole and hold in for 3 seconds.	192.168.0.1	admin / admin
NET-PL-200AV-PEW-N (HL110EW)	Insert a paperclip into the Reset Hole and hold in for 3 seconds.	192.168.1.120	
NET-PLV-200AV-PEWN_MK2	Press and hold down the WPS Button for 5 seconds.	10.0.10.254	admin / admin
NET-PL-200AV-WALL-4PE	Insert a paperclip into the Reset Hole and hold in for 3 seconds.		
NET-PL-200AV-3PE	Insert a paperclip into the Reset Hole and hold in for 1 to 3 seconds.		
PL-200AV-4PE	Insert a paperclip into the Reset Hole and hold in for 1 second.		