


# How To Set Up The Tenda AC6 As An Access Point

## Step 1: Log Into The Web Interface.

Make sure that you have connected an Ethernet cable from your laptop or computer to the LAN port on the back of the unit, and that you are not connected to any other networks.


Then open up a web browser, for example Mozilla Firefox, Microsoft Edge, Google Chrome and type 192.168.0.1 into the address bar, and press enter.

You will be greeted by the Quick Setup Wizard, so click the Start button.

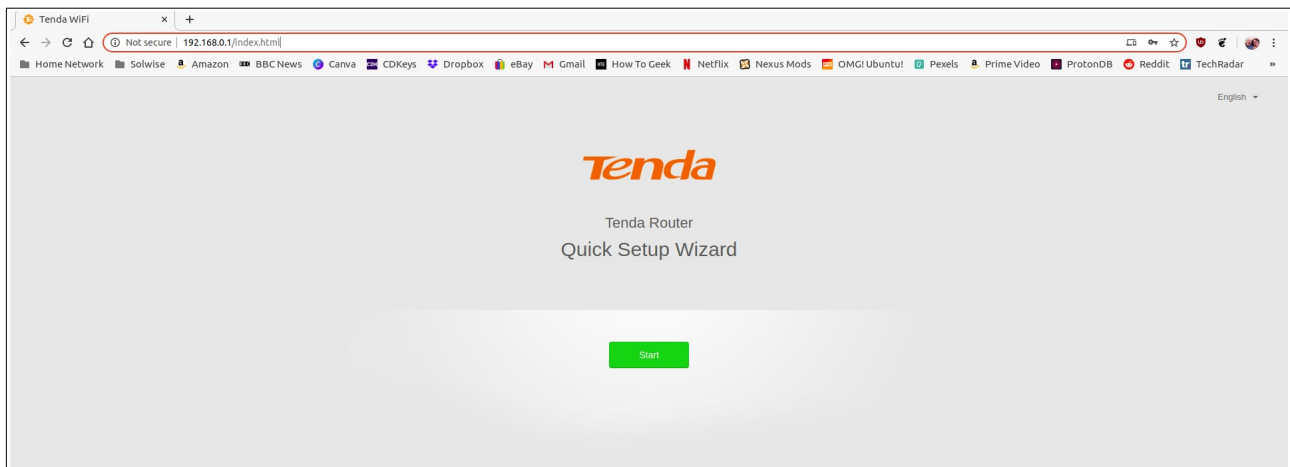

## Step 2: Detect Connection Type


The unit will run through a quick connection test, but it will not be able to detect an Internet connection, this is expected so click on the Skip button.

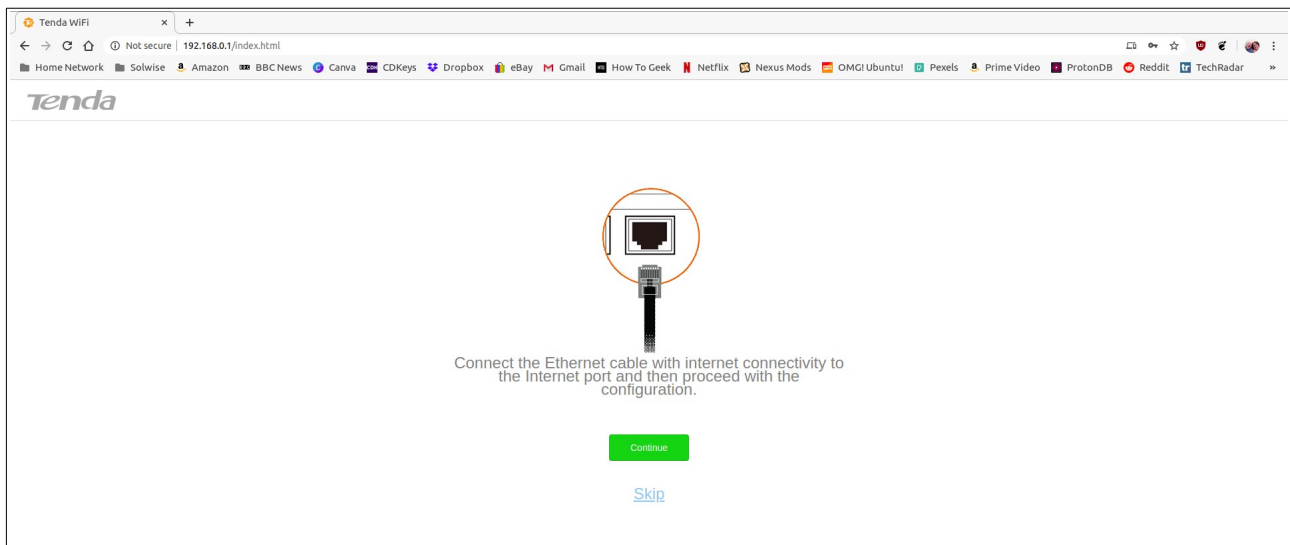

### Step 3: Setting Up The SSID And Security


Next we need to set up the Transmit Power for the wireless broadcast, name the SSID, and set a password for the SSID and Admin account.

Once done, click the Next button.

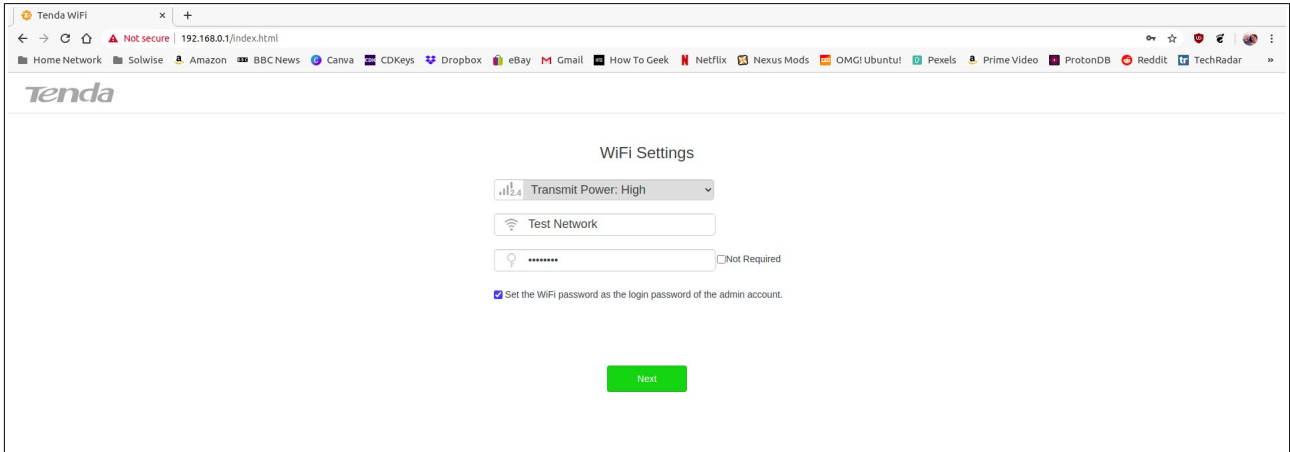

### Step 4: Sign Back Into The Web Interface


Since we have updated the password for the admin account, we will have to sign in again with this updated credential.

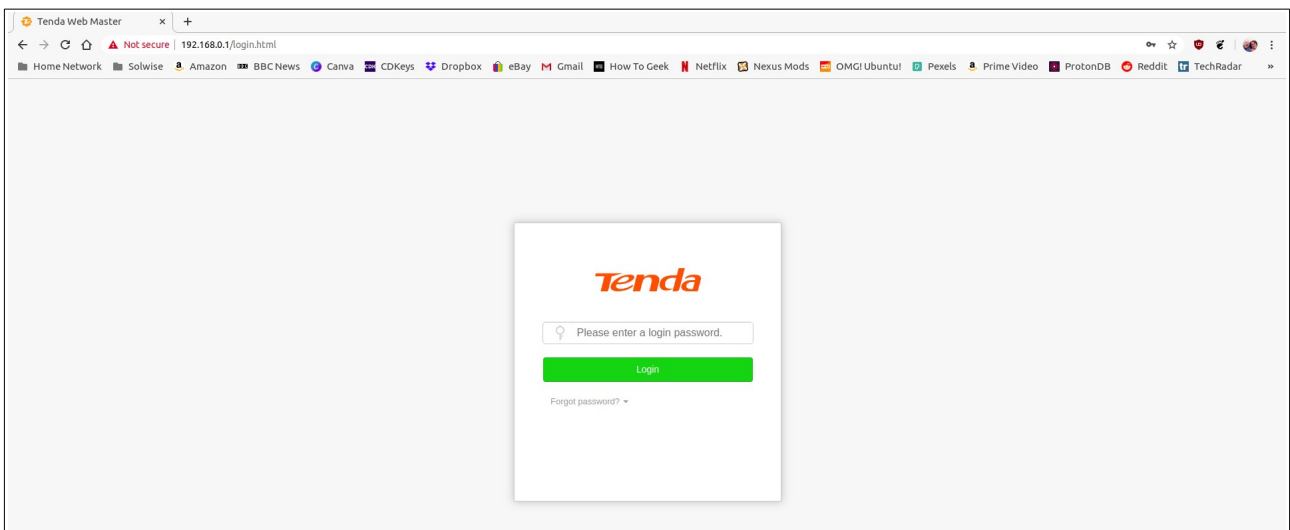

## Step 5: Enable AP Mode

Now that we are logged into the web interface, we need to enable AP Mode so that the unit will be operating as an Access Point and not a Wireless Router.

This can be done by navigating to Wi-Fi Settings and click on the AP Mode icon.

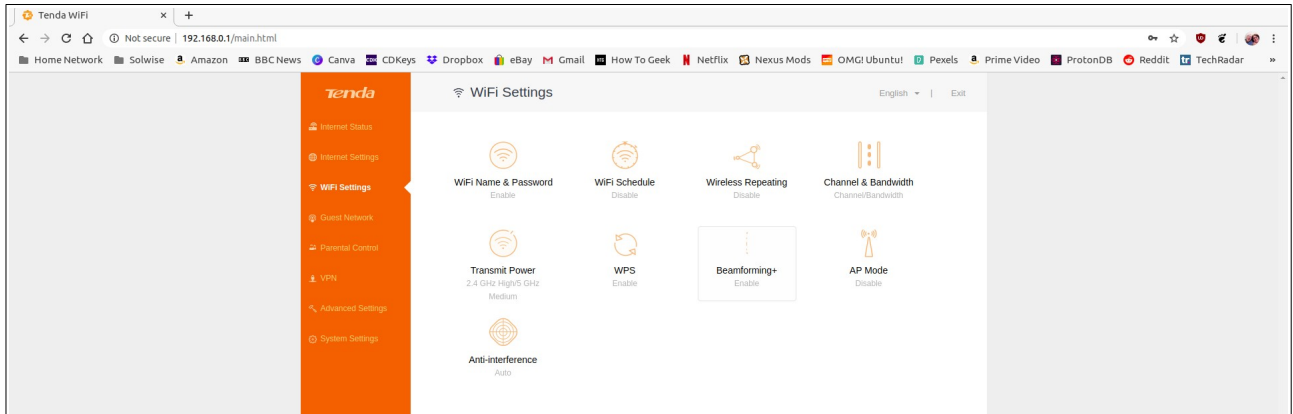

## Step 6: Confirm AP Mode

On the window that appears, toggle AP Mode on, and click the Save button.

You will get a prompt to restart the unit, and once done, connect up to your existing network you are all done.

