


Assembly of Clamp type N Plugs for '400 cable

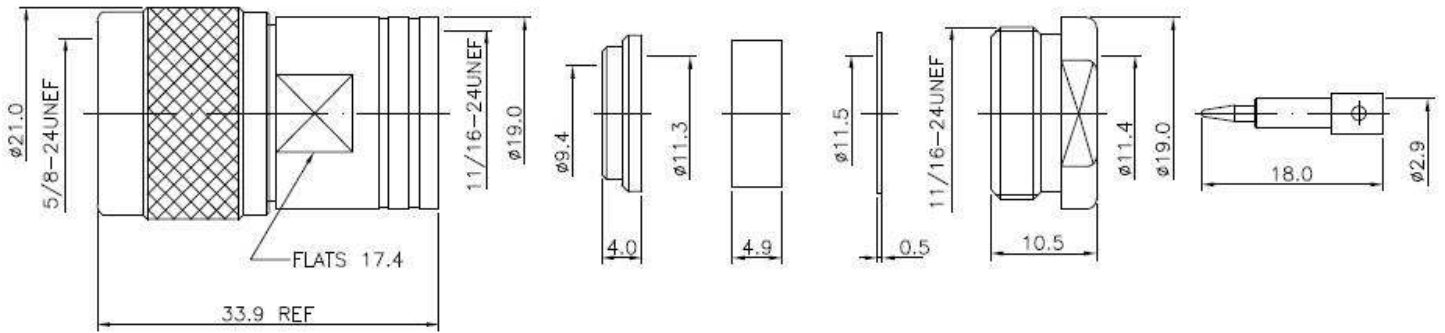

Basic Assembly



Thread body screw, washer and sealing ring onto cable.
Strip cable outer jacket about 10mm and pare back braid.



Cut white PTFE insulator to about 2-3mm.
Crimp or solder centre pin onto centre core.
Thread ferrule onto cable as shown.



Fold braid back and push ferrule against cable end.



Screw main body over cable and onto body screw.
Tighten until cable is secure in connector.