



Only use mast provided.  
 Do not attach to worn roof i.e. nail tired or crumbling tiles.  
 The clamp should be firm but not over tight to roof.  
 Make sure rubber pads are placed at each pressure point.

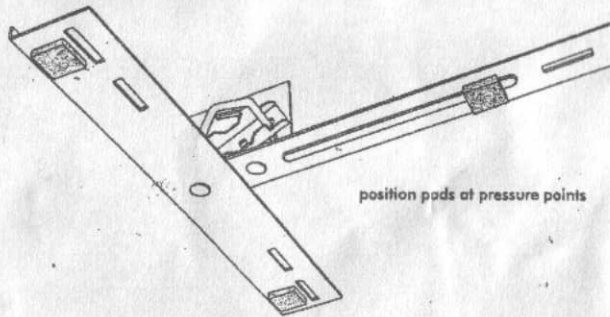

position pads at pressure points

**Positioning of the galvanized strips**

note correct orientation of the 'claw'

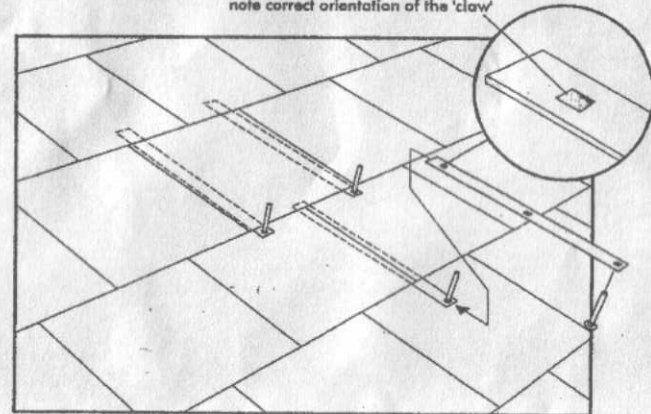

**Completed installation**

