




1. Mark three screw holes on the ceiling with a pencil;

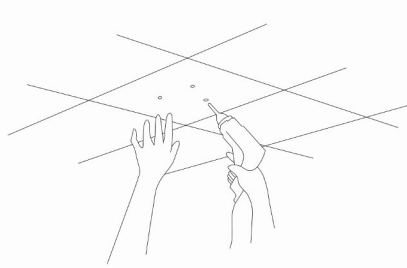


2. Drill three holes on which you've marked;

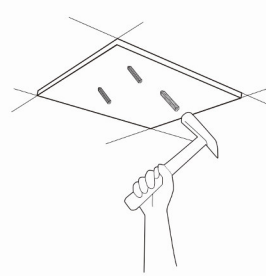


3. Knock the expansion bolts onto the ceiling with a rubber hammer;

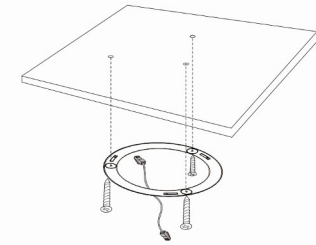


4. Place the Ethernet cable into wire slot of the bracket and insert screws into expansion bolts;

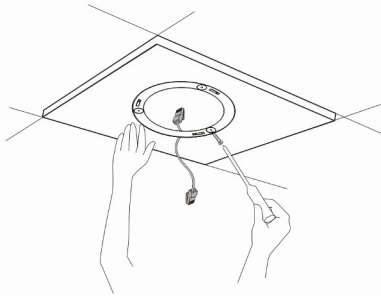


5. Tighten screws into expansion bolts with a screwdriver;

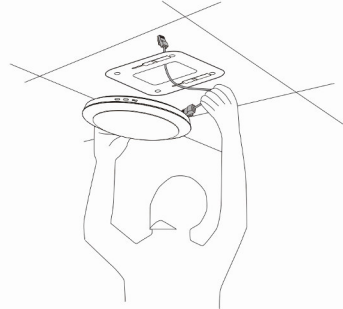

6. Connect one end of the Ethernet cable to the port of the AP;

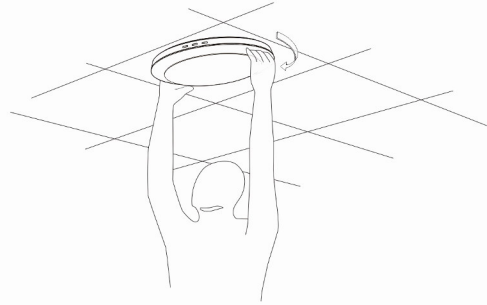


7. Install the AP onto the bracket;

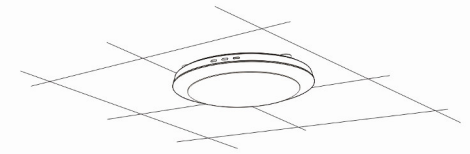


8. When the AP completely fits the bracket, ceiling installation is finished.


## Wall Mount Installation

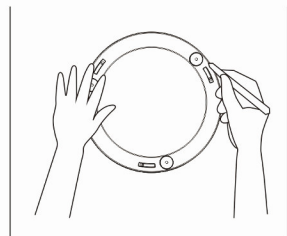


1. Mark three screw holes on the wall with a pencil;

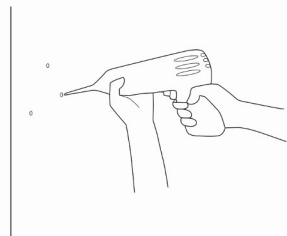

2. Drill three holes on which you've marked;

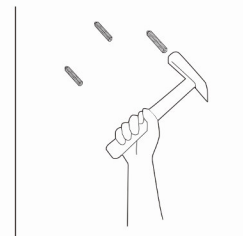

3. Knock the expansion bolts into the wall with a rubber hammer;

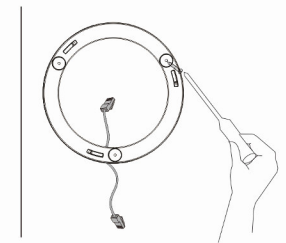

4. Place the Ethernet cable into wire slot of the bracket and insert screws into expansion bolts;

